


TYPICAL INSTALLATION FOR CONTROLAIR
MOTORIZED TYPE-100M CONTROL
CIRCUIT DIAGRAM

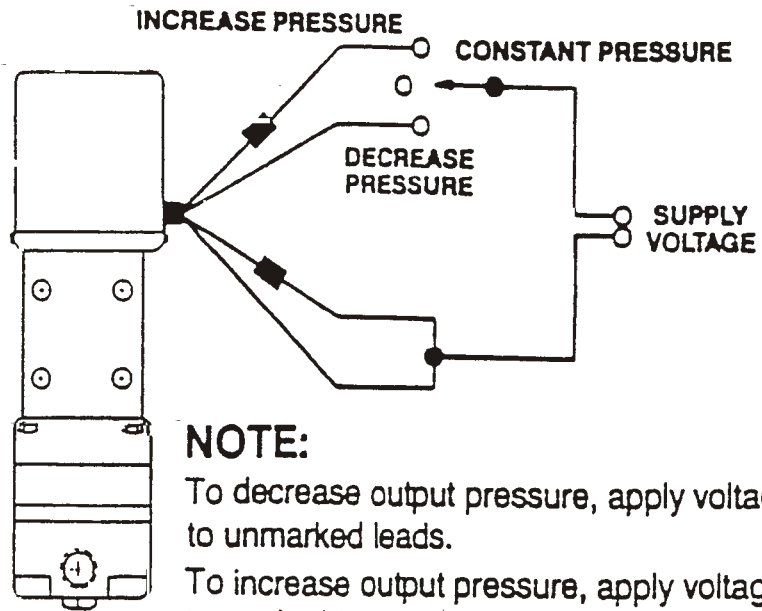

NOTE:

To decrease output pressure, apply voltage to unmarked leads.

To increase output pressure, apply voltage to marked leads.